



INSTRUCTIONS FOR ADJUSTING THE DROP-DOWN SEAL

All work must be carried out in accordance with health and safety regulations and construction best practices by qualified personnel.

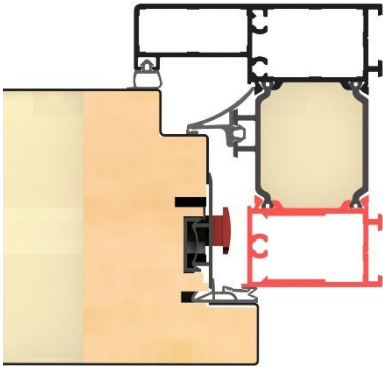


1. The drop-down seal is not factory-adjusted (see point 2). The seal position should be adjusted after the door installation is complete.

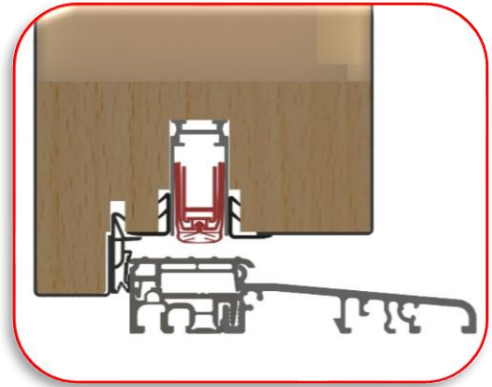


2. Seal position before adjustment (does not adhere to the threshold). The adjustment process is described in point 3.



3. Using an Allen key, unscrew the triggering element to allow the seal to drop when pressed against the door frame. Continuously check the seal's contact with the threshold. The optimal setting ensures full contact between the seal and the threshold.

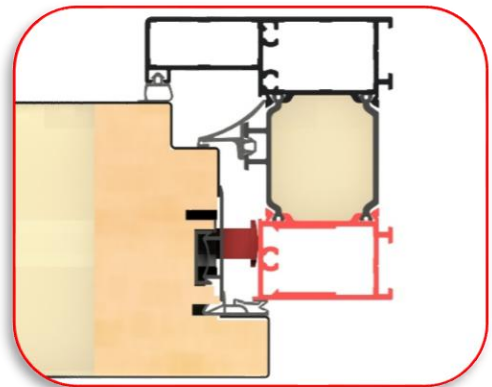

4. The triggering mechanism should be properly adjusted when the door is closed.

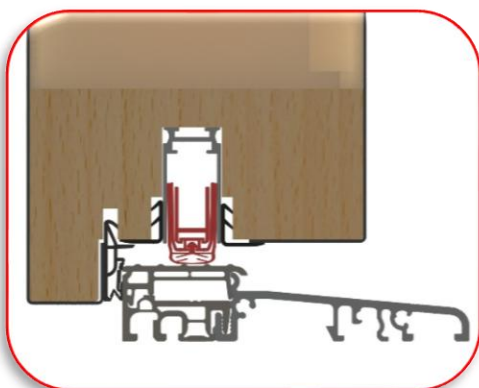

5. The seal should adhere correctly.
WARNING! Excessive unscrewing of the triggering element may cause excessive tension on the drop-down seal or even irreversible damage.