


# Liniar Square Bay Post with Jack Pole

## Assembly Instructions

**1.** Prepare the cill platform locally by removing up stand to allow for Corner post at the welded joint.



**2.** Strike a line 35mm from the back edge of each cill, where they intersect is the centre point at which your  $\varnothing 22\text{mm}$  hole is drilled

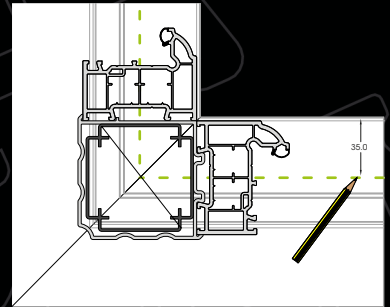

**3.** Drill the  $\varnothing 22\text{mm}$  diameter hole through the cill



**4.** Locate Jack Base from underside of the cill and screw in adjustment platform from top side.



**5.** Assemble top and bottom spreader plates with aluminium bay post and position onto Jack.



# Liniar Square Bay Post with Jack Pole

## Assembly Instructions

**6.** Adjust the Jack until the top spreader plate is tight up against the head of the building reveal and ensure that the aluminium post is plumb/vertical.



**7.** Mark position of the top spreader plate and then remove aluminium post by lowering the Jack.

**8.** Secure top spreader plate at the marked position to the reveal head using appropriate fixings.

**9.** Prepare the bottom of the PVCu square post cover on face by removing a 55mm x 40mm area and slide aluminium post into the cover.



**10.** Assemble aluminium post and PVCu cover onto Jack and adjust until the aluminium post is located onto the top spreader plate.

